

SLOUCHPOD INTERACTIVE XT™

The Next Generation in Interactive Gaming Chairs



Play



Listen



Watch



Please read this instruction manual and ensure that you fully understand it prior to using your Slouchpod Interactive XT™. Do not return to store

Assembly Instructions

Index

Safety Warnings	3
Contents and descriptions	4
Un-packing product	5
Connection method	6
Power lead connection	6
Important safety instructions	7
Service and Warranty	8
Trouble Shooting	10
Spares and Accessories	12
Need Help?	12

The Slouchpod Interactive XT is the ultimate gaming chair, looks cool, feels great, sounds unbelievable for use with games consoles, MP3 players, laptops, TV's, videos and CD players. To ensure the best sound experience please read the instructions carefully before using your Slouchpod Interactive XT and retain these instructions for future reference.

IMPORTANT - DO NOT FORGET TO COMPLETE AND RETURN YOUR GUARANTEE CARD



SAFETY WARNING



The Slouchpod Interactive XT is intended for indoor use only, do not use outdoors. Use this appliance only for its intended purpose as described in this manual.

- Do not expose the Slouchpod Interactive XT to rain or moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Do not use this product if it is not working correctly, damaged or has been subject to any liquid on or near any electrical part.
- Adult supervision is required for set-up.
- Excessive use of audio equipment at high volume can lead to hearing impairment, be sensible and use volume responsibly.
- Children under the age of 13 years should not use this product without parental supervision.
- Do not wash the Slouchpod with water; if it gets wet it should be disconnected from the mains supply by a responsible adult.

Contents

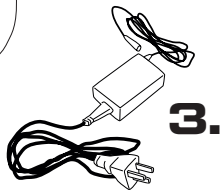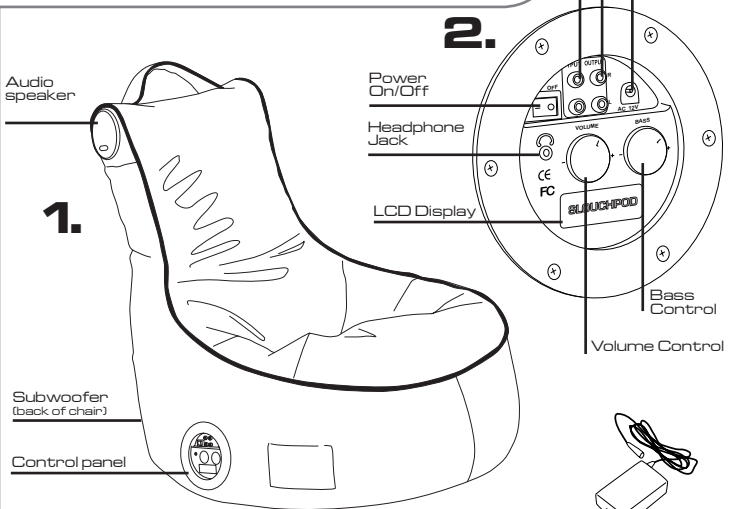


1. 1x Chair
2. 1x Control panel
3. 1x 12v Adaptor
4. 1x Red/White RCA audio connection cable
5. 1x Red/White RCA to mini audio cable
6. 1x 3.5mm mini jack plug to RCA plug adaptor
7. 2x RCA audio cable extenders

Items 4-7 not illustrated


Spare cables and adaptors can be purchased at
www.slouchpod.com

Un-Packing


Do not use any sharp implement to remove outer packaging as this may cause damage to the product.

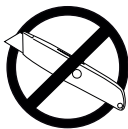

1.

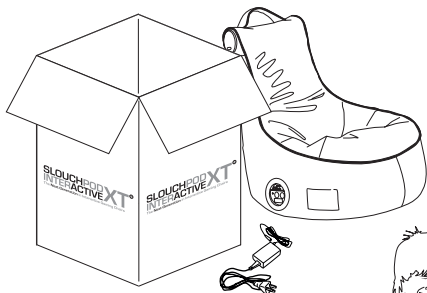

2.

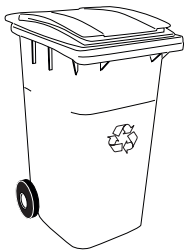

3.



- 1.** Remove chair and adaptor box from all packaging.
- 2.** Discard / Re-cycle outer packaging waste safely.
- 3.** The chair filling has been displaced from the back section for transport purposes. It will be necessary to sit in the centre of the chair to manipulate the fillings into the back section.

Getting Connected

Please see quickstart card for connection methods to gaming, audio and visual devices.



Power Lead connection -

1. Always ensure that your hands, Slouchpod and power cord are dry before plugging the unit into mains socket.
2. Ensure power switch on control panel is set to the off position.
3. Insert male 12 volt power lead into AC 12V connection on control panel.
4. Insert mains plug and switch on.
5. Switch on Slouchpod at control panel, the Slouchpod light should now be illuminated on the control panel.
6. When not in use switch off at control panel and disconnect from mains power supply.

Important Safety Instructions

- 1.** An appliance should never be left unattended when plugged in to a power outlet.
- 2.** Keep the power plug and cord away from heated surfaces.
- 3.** Make sure the power plug and any electrical part do not get wet.
- 4.** Do not plug in or unplug unit with wet hands.
- 5.** Do not use this product with a damaged cord. A replacement can be obtained from our customer helpline, **service@slouchpod.com**
- 6.** Always unplug from the mains when cleaning.
- 7.** Only use parts supplied with this unit or nominated sound source. Use of non Slouchpod parts with this product may give rise to a hazardous condition and will negate your warranty.
- 8.** Do not submerge.
- 9.** Do not use outdoors
- 10.** To avoid injury or death from electric shock - never remove control panel cover or speaker.

Service & Warranty

This product has been checked and is free from defects. We warrant this product against any defects that are due to faulty material or workmanship for a period of 90 days from the original date of consumer purchases. This warranty is enforceable only by the original purchaser.

If the product should become defective within the warranty period, we will repair or elect to replace the product or any part of it without charge provided there is proof of purchase and the return guarantee card has been duly completed and returned.

This warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty covers all defects in materials and workmanship in this product, but DOES NOT COVER the following:

- 1.** Damage, deterioration or malfunction resulting from:
 - Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this owners manual.
 - Any shipment of the product
(claims must be presented to the carrier)
 - Repair, attempted repair, or modification by anyone not authorised.
- 2.** Any unit used for industrial or commercial purposes.
- 3.** Products sold 'AS IS' or 'WITH ALL FAULTS,' or consumables such as fuses.
- 4.** Customer instruction, installation, set up adjustments or signal reception problems.
- 5.** Cost of carriage to and from place of repair

Trouble Shooting

Chair back not sitting upright

Sit on chair seat a few times to manipulate fillings into back section.

No sound from unit

Ensure power is switched on at mains

Ensure power is switched on at control panel

Adjust volume at control panel

Ensure sound source is activated

Check the connections on your audio / video device.

The cables should be connected to the AUDIO OUTPUT jacks. Check the connections to your Slouchpod. The RCA cables (red and white) must be to the input jacks.

No illumination of Slouchpod light at control panel

Ensure unit is plugged in and switched on at mains socket

Ensure unit is switched on at control panel

Unable to connect to the gaming console

Check that the console's RCA audio cables are connected to the Slouchpod extension cable correctly (red to red and white to white) If extension cable is required.

Check that the console's RCA audio cables are connected correctly to the Slouchpod control panel (red to red and white to white).

Check that the console's RCA video cable (normally yellow) is connected to the INPUT jack on the television.

Your video game console has a coaxial cable instead of an RCA audio cable

If your gaming console uses a coaxial cable, you can not connect it directly to the Slouchpod. Connection can be made via an intermediary device such as TV, DVD etc.

Chair is Sagging

If after protracted use the chair appears to be sagging it may need the internal filling topped up. Top up refill packs can be purchased from **www.slouchpod.com**. To refill simply turn the chair upside down (making sure it is first disconnected from the electricity supply) unzip the 2 bottom zips, pour bead filling into the chair and zip up both sets of zips. The chair is then ready for use.

SLOUCHPOD INTERACTIVE XT™

The Next Generation in Interactive Gaming Chairs



Spares & Accessories

All spares and accessories can be purchased online at
www.slouchpod.com

Need Help?

Visit our website **www.slouchpod.com**

E-mail; **service@slouchpod.com**

Online guarantee registration

guaranteereg@slouchpod.com

Slouchpod Ltd, Unit 1, New Road, Winsford, Cheshire, CW7 2NU

Tel: 0800 88188 76 Fax: 0800 88184 92